

Acoustic Soffit

INSTALLATION

Required Tools:

- Staple Gun
- Tape measure
- Chalk line or laser level (recommended)
- Panel Adhesive
- Pencil

Parts Included:

- Soffit Field Sections
- Soffit Corner Keystones
- "J" Rails
- Template

Layout Procedure

1. First, use the template that was shipped with your Soffit to mark off "J" rail edges along the upper perimeter of your room.
2. The outer edges of the template indicate where to place your mark (see illustration).
3. For each run, use the template to mark each end. Then use a chalk line or laser level to snap the entire run. Do this for the wall and ceiling, repeating the procedure until all areas receiving Soffit are snapped.

Install "J" Rail


1. ASC shipped the "J" rail with double sided adhesive tape installed.
2. Before application, remove the protective backing paper, position the rail so that the lowermost portion is lined up with the chalkline, and press into place. Study the illustration to the right. Be patient and take your time since repositioning is difficult.
3. As each piece goes up, press firmly, setting the rails in place. Remember that a looser fit is better than a tight fit, so the rails should be positioned on or slightly over your chalkline.
4. Using a staple gun, staple rails to increase adhesion.
5. Make your rails run the full length using a metal shear or other heavy duty cutting tool to cut rail to fit.
6. When you are done, rails will continuously run the entire perimeter of Soffit.

Install Soffit


1. To install, hook the upper portion of Soffit section onto "J" rail. Then use the heel of your hand to push up on the lower portion, snapping the section onto the lower rail.
2. Sections can be slid along on the rail to fine tune placement.
3. Finally, the corner keystones are dropped in, using the built-in tabs to hold them in position.



Template in use

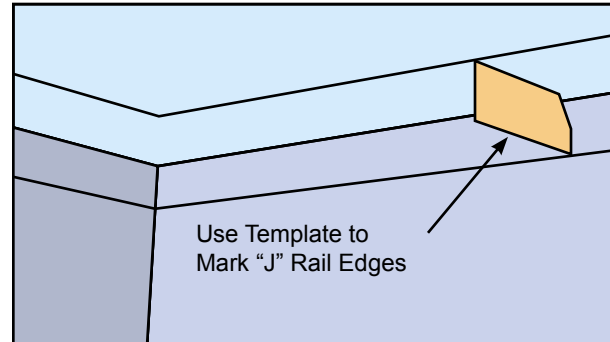

"J" Rail Placement

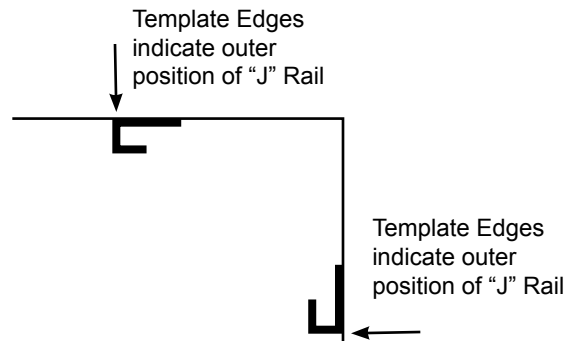

Hooking the Upper "J" Rail



Snapping Soffit into Place



Soffit After Installation on "J" Rail

