



PlanarTrap

Required Tools:

- None


Parts Included:

- PolyPanel (A)
- End Plugs (B and C)
- Mounting Plate (D)
- Absorption Panel (E)

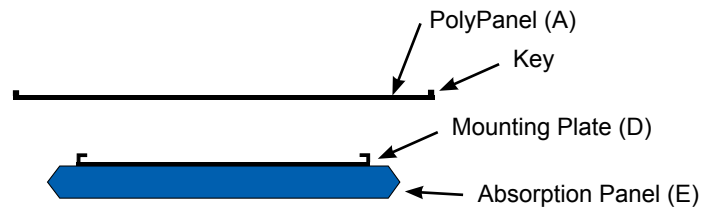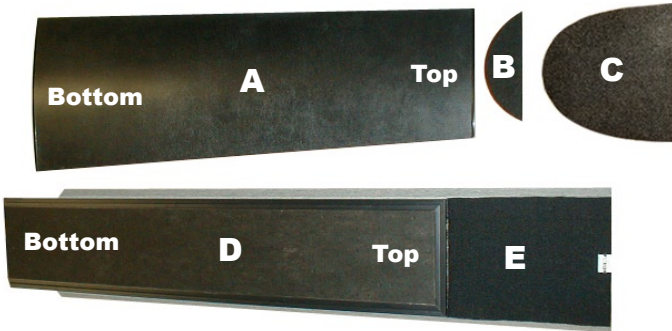


Lining up PolyPanel with Absorption Panel

Insert Keys on PolyPanel here first

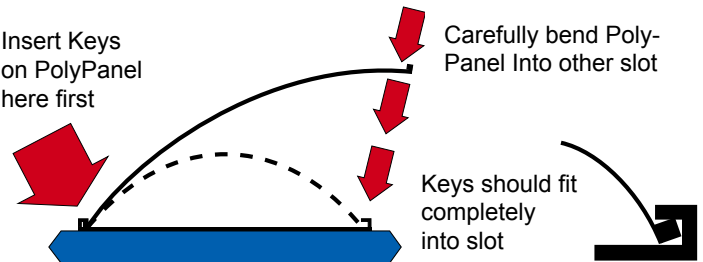

Inserting Poly Into one side first (1, 2)

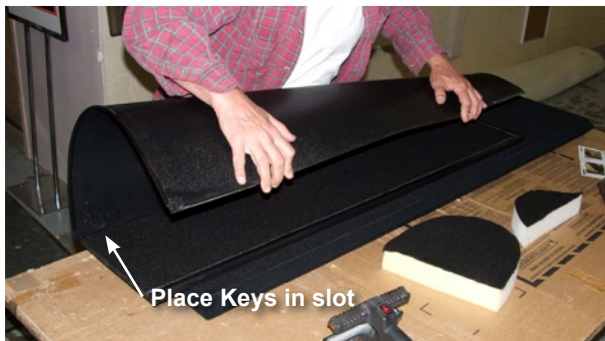

Keys of PolyPanel Into Slot (3)



Then carefully work it into the other slot (4)



Assembly Procedure

The PolyPanel (A) needs to be installed into the track of the Mounting Plate (D) on the rear of the Absorption Panel (E).

Install PolyPanel

1. The PolyPanel (A) has a narrow top end and a wide bottom end which creates the unique vertical taper after assembly.
2. Place the Absorption Panel (E) on a table face down, with the Mounting Plate (D) facing up.
3. Line up the wide end of the PolyPanel (A) with the bottom of the Mounting Plate (D). Insert both Keys of the PolyPanel into the near side of the long plastic slotted track, making sure the Keys are worked into track.
4. Now carefully bend the PolyPanel and insert the other two Keys into the other long plastic track, gently working those Keys fully into the track. Install bottom Key first.
5. Slide PolyPanel up until it stops.

Install End Plugs

6. The End Plugs (B and C) are friction fitted.
7. They are slightly oversized, so a little stuff factor is required.

Install End Plugs (6, 7)

